




Dr. Nick White

Science and Mission Overview



The Constellation X-ray Mission

Studying the life cycles of matter in the Universe

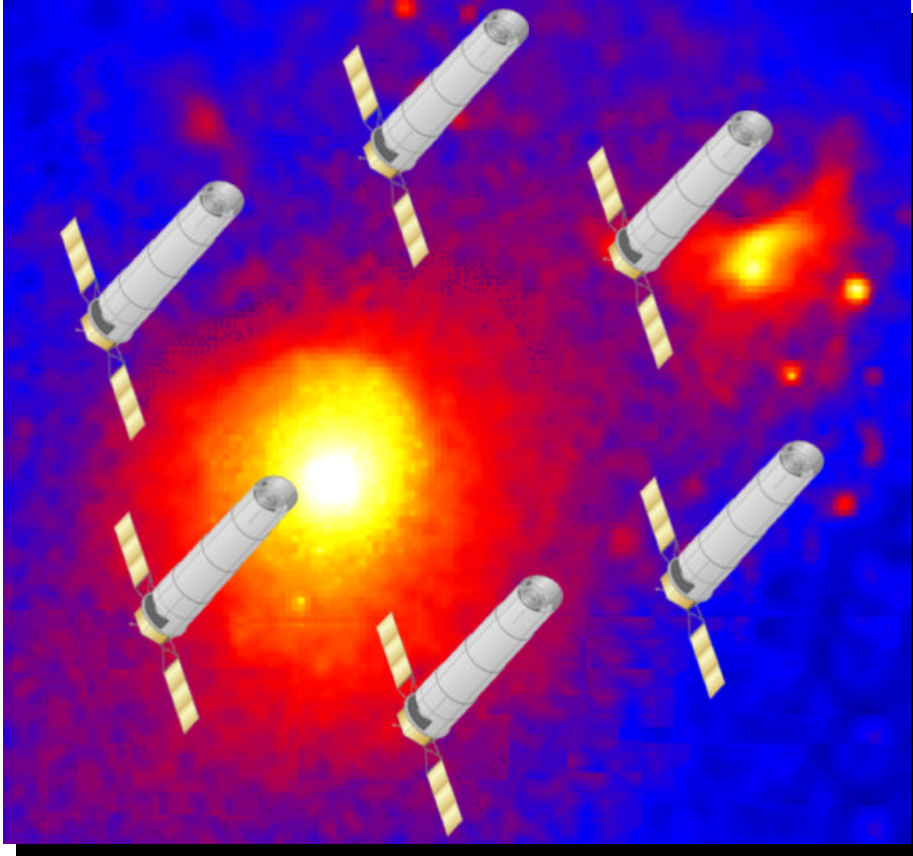

Constellation-X


- Key scientific goals
 - Elemental abundances and enrichment processes throughout the Universe
 - Parameters of supermassive black holes
 - Plasma diagnostics from stars to clusters
- Mission parameters
 - Effective area: 15,000 cm² at 1 keV
100 times AXAF and XMM for high resolution spectroscopy
 - Spectral resolving power: 3,000 at 6.4 keV
5 times Astro-E calorimeter
 - Band pass: 0.25 to 40 keV
100 times increased sensitivity at 40 keV



Studying the Life Cycles of Matter with the Constellation X-ray Mission

Obtain high quality X-ray spectra for all classes of X-ray sources over a wide range of luminosity and distance to determine:


- the abundance of elements with atomic number between Carbon and Zinc ($Z=6$ to 30) using line to continuum ratios
- the ionization state, temperature, and density of the emission region using plasma diagnostics
- the underlying continuum process with a broad bandpass
- dynamics from line shifts and line broadening

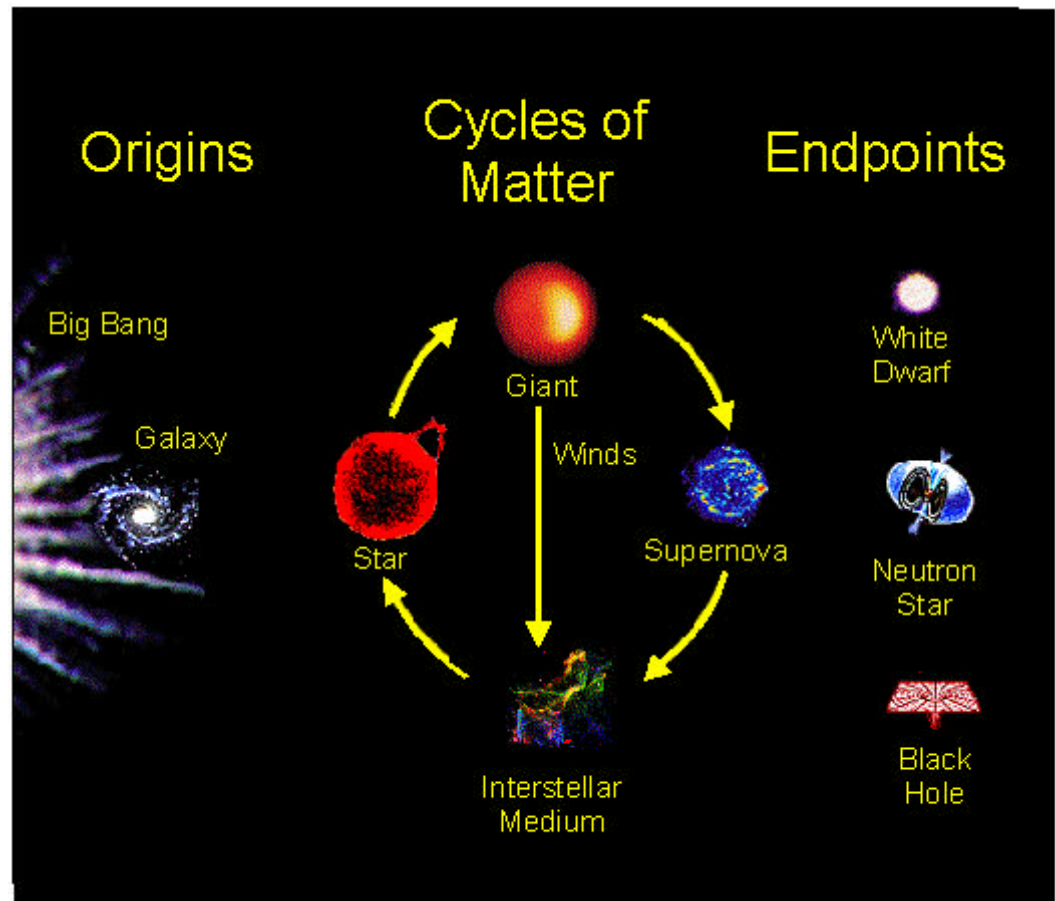



Observations of Clusters of Galaxies

Baryon content of Universe is dominated by hot X-ray emitting plasma

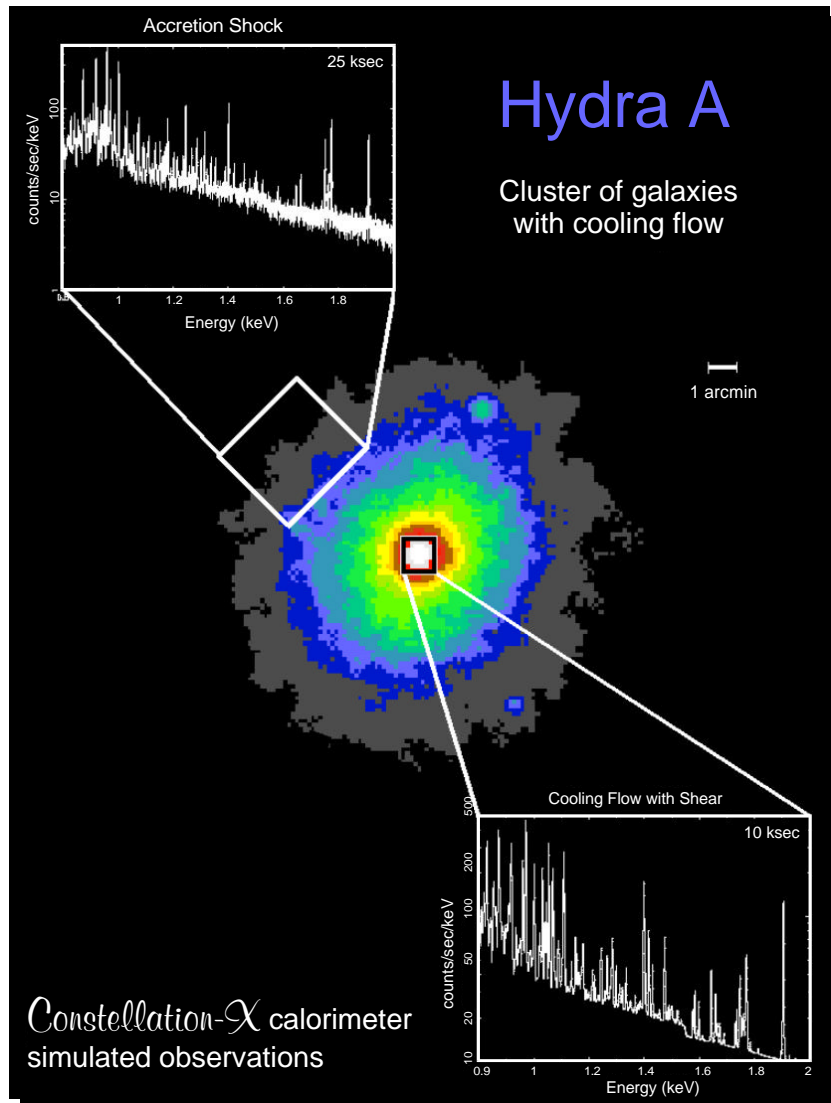


Clusters of galaxies are the largest and most massive objects known

Constellation-X observations of clusters essential for understanding structure, evolution, and mass content of the Universe

- Observe epoch of cluster formation and determine changes in luminosity, shape, and size vs redshift
- Measure abundances of elements from carbon to zinc, globally mapping generation and dissemination of seeds for earth-like planets and life itself
- Map velocity profiles, probing dynamics and measuring distributions of luminous and dark matter




Constellation-X Will Determine the Nature of Supermassive Black Holes

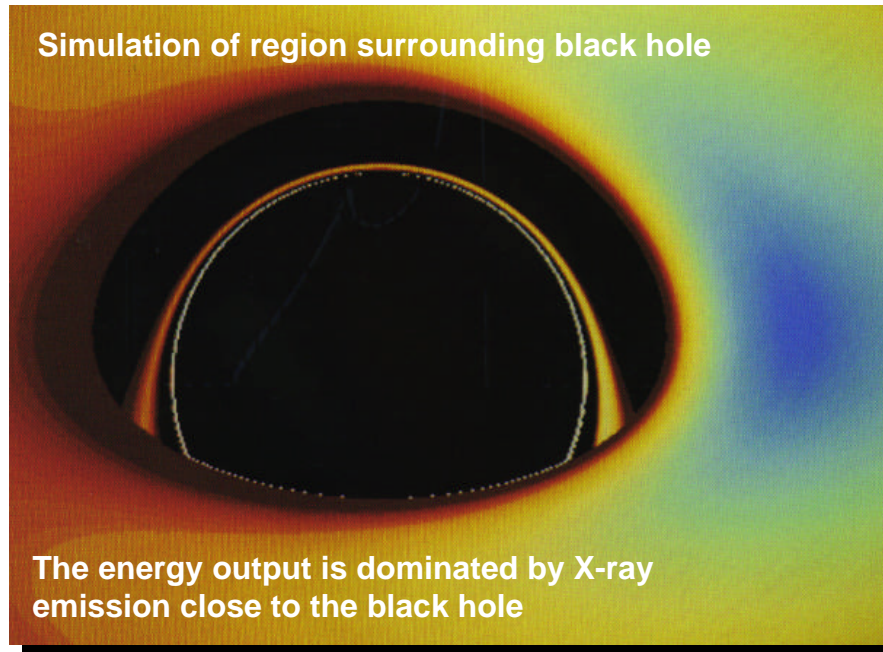

- Active galactic nuclei and quasars powered by accretion of matter onto supermassive black holes
- X-rays produced near event horizon and probe 100,000 times closer to black hole than HST
- Relativistically broadened iron lines probe inner sanctum near black holes, testing GR in strong gravity limit

- Constellation-X will determine black hole mass and spin using iron K line
 - Spin from line profiles
 - Mass from time-linked intensity changes for line and continuum

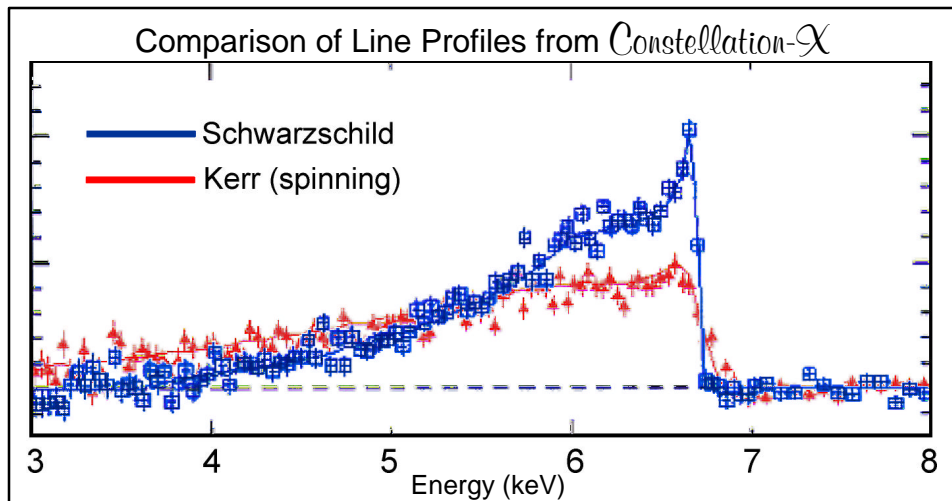



Constellation-X Requirements Flow Down

Science Goals

Elemental Abundances
and Enrichment
throughout the Universe

Parameters of
Supermassive
Black Holes

Plasma Diagnostics
from Stars to
Clusters

Measurement Capabilities

Minimum effective area: 15,000 cm² at 1 keV
6,000 cm² at 6.4 keV
1,500 cm² at 40 keV

Telescope angular
resolution: 15" HPD from 0.25 to 10 keV
1' HPD above 10 keV

Minimum spectral
resolving power ($E/\Delta E$): 300 from 0.25 to 6.0 keV
3000 at 6 keV
10 at 40 keV

Band Pass: 0.25 to 40 keV

Key Technologies

High Throughput Optics

- *Lightweight ≤ 250 kg*
- *Replicated shells and segments*

High Spectral Resolution

- *2 eV microcalorimeter arrays*
- *Coolers*
- *Lightweight gratings*
- *CCD arrays extending to 0.25 keV*


Broad Bandpass

- *Multilayer optics*
- *CdZnTe detectors*




Constellation-X Instrumentation

Calorimeter Array

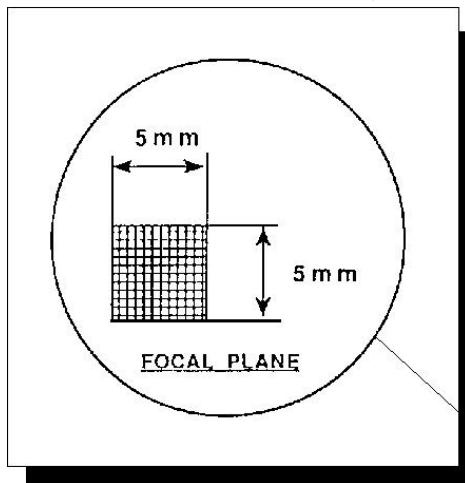


Spectroscopy X-ray Telescope

One unit per spacecraft

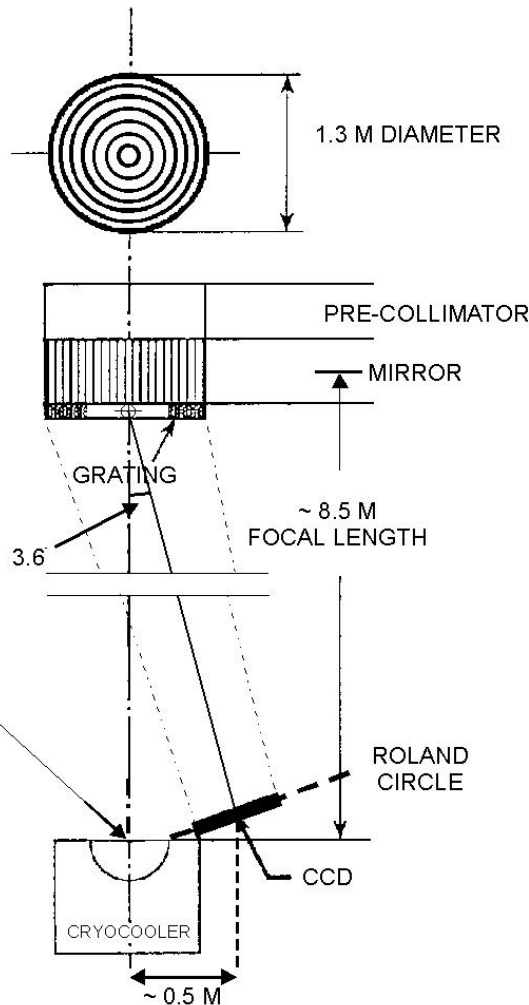


Hard X-ray Telescope

Three units per spacecraft

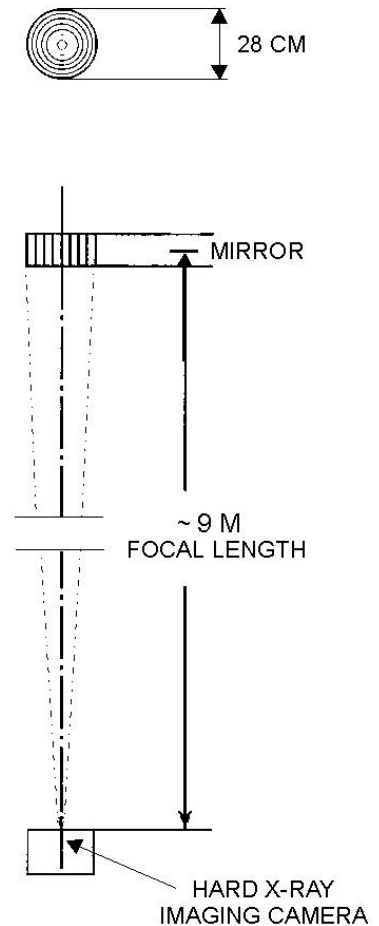




Constellation-X Reference Design

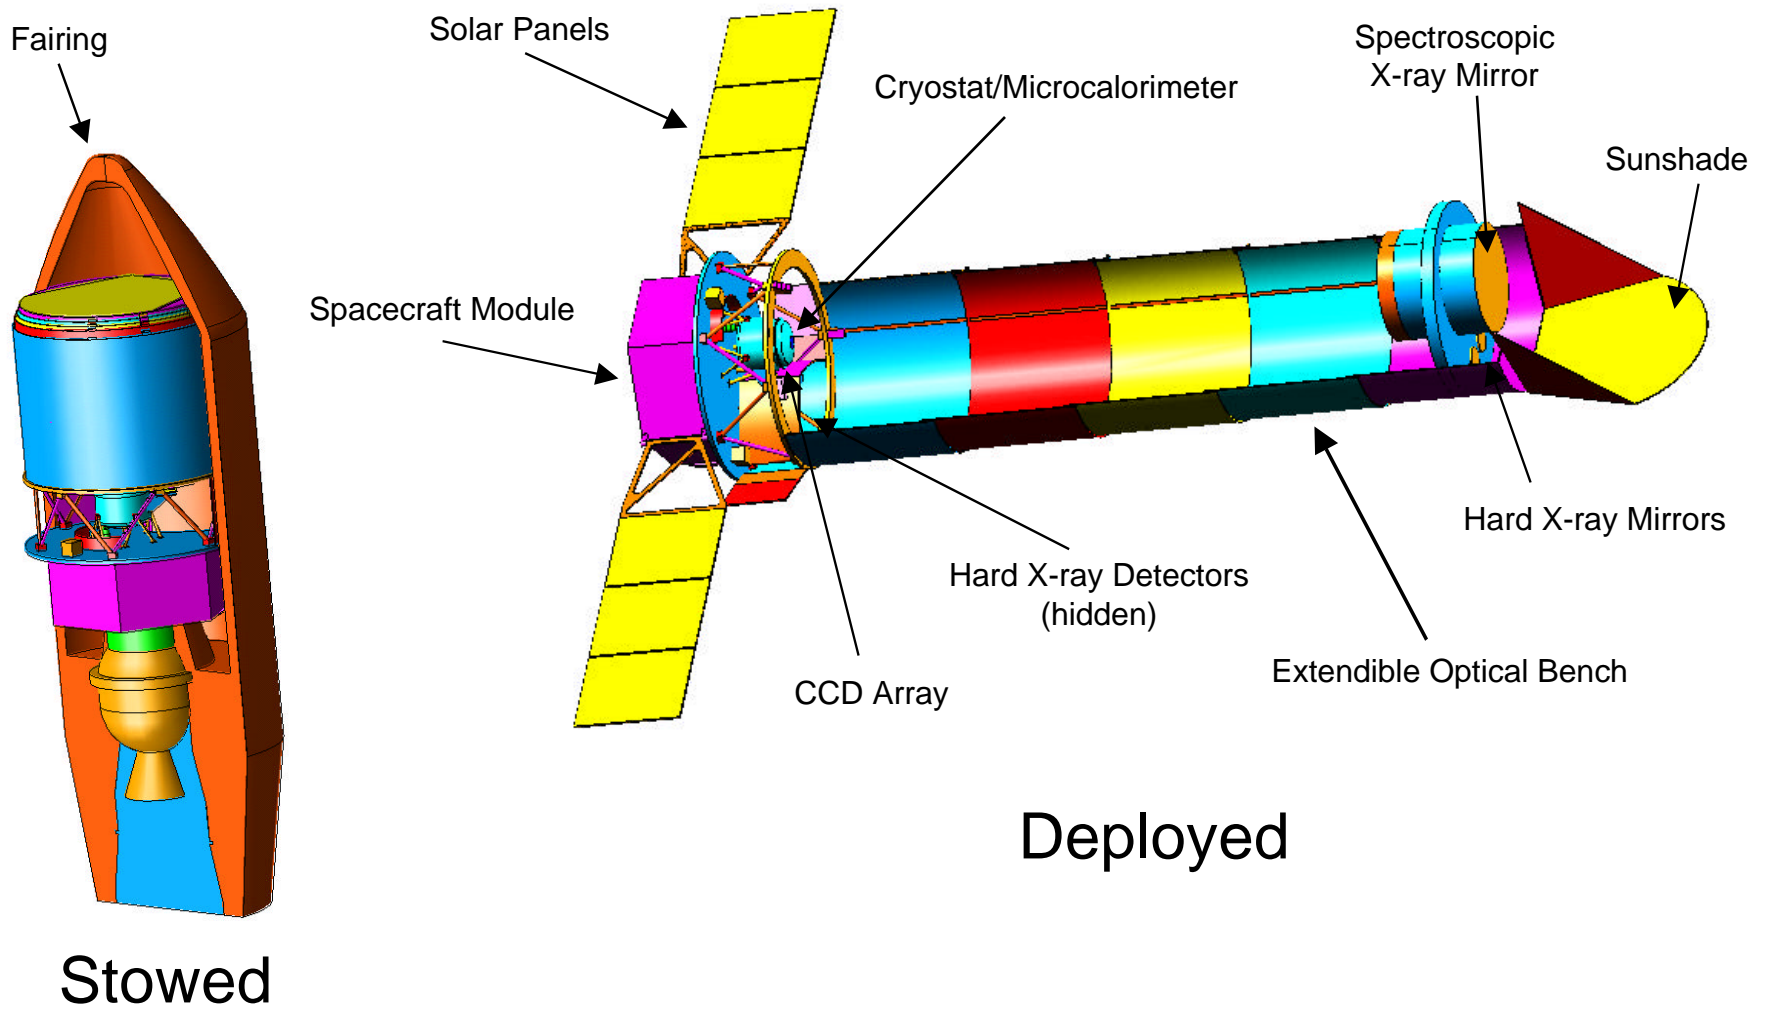



Constellation-X Science Payload

Two coaligned telescope systems cover the 0.25-40 keV band.

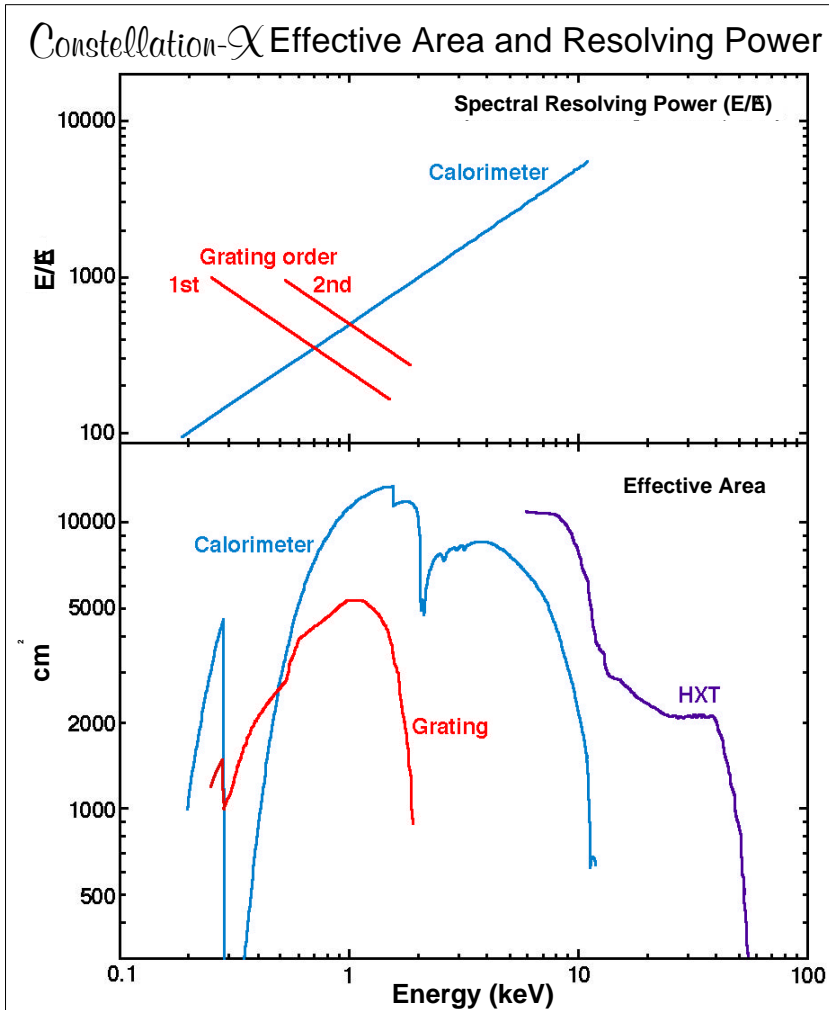

A spectroscopy X-ray telescope (SXT) from 0.25 to 10.0 keV

- an array of microcalorimeters with 2 eV resolution.
- a reflection grating/CCD to maintain resolution > 300 below 1 keV

A hard X-ray telescope (HXT) from 10 to 40 keV


- grazing incidence optics
- an energy resolution ~ 1 keV, sufficient to measure the continuum



Constellation-X Advanced Capabilities

I. High Throughput


Comparison of High Resolution Spectrometer Effective Areas

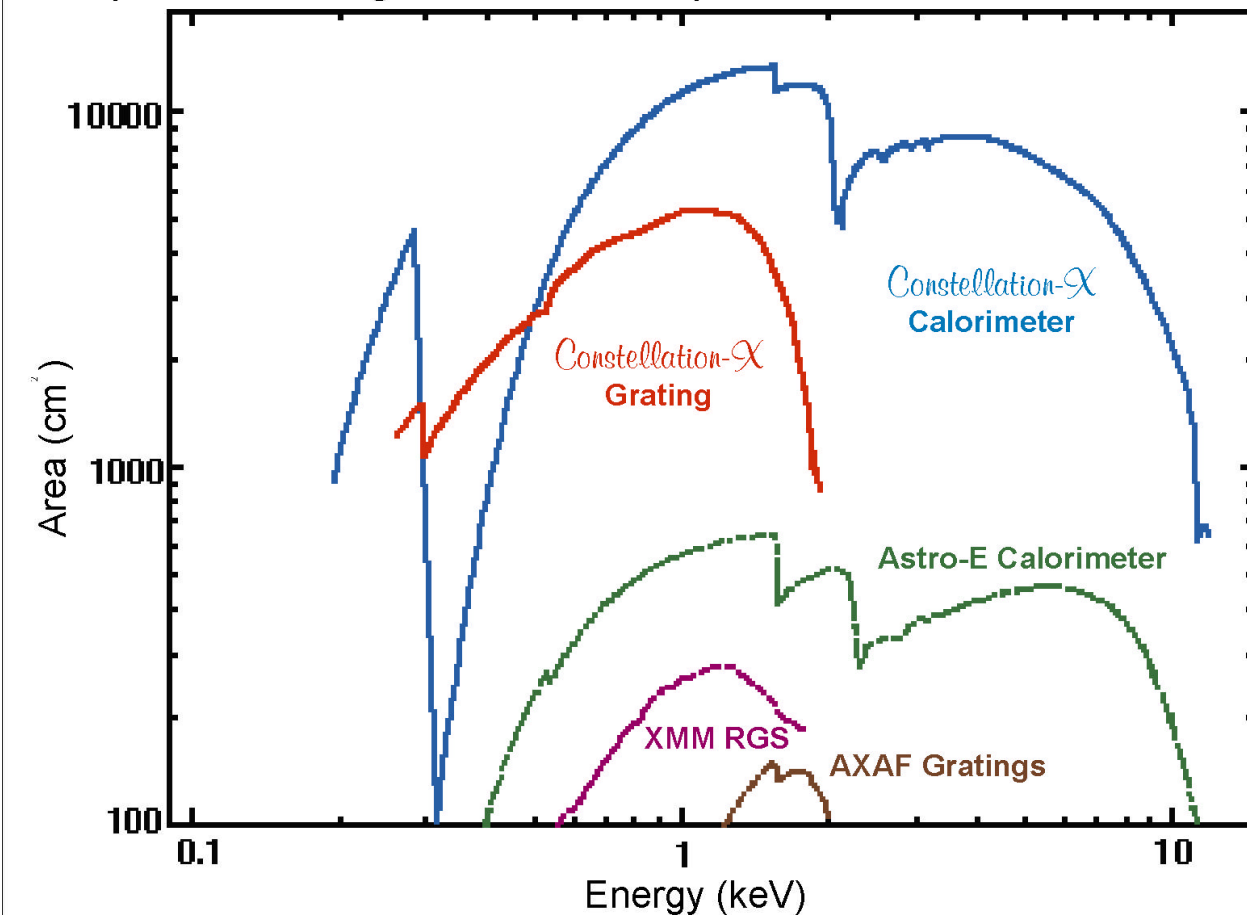

A 20-100 fold gain in effective area for high resolution X-ray spectroscopy


High throughput optics plus high quantum efficiency calorimeters

Lightweight reflection gratings maintain resolution and coverage at low energies (< 1 keV)

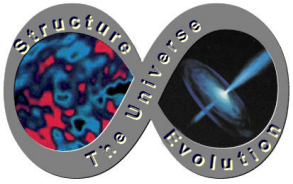

Constellation-X Advanced Capabilities

II. High Spectral Resolution

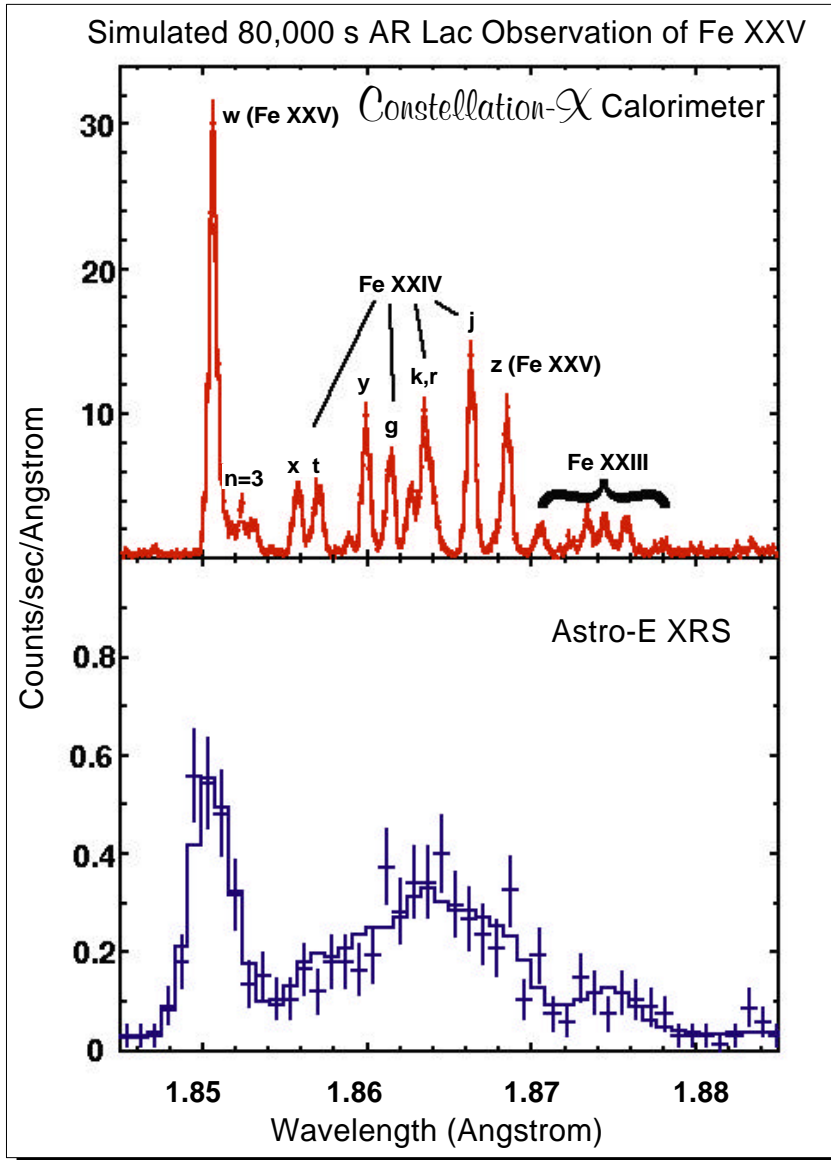

The Next Generation Microcalorimeter Array

High quantum efficiency with the capability to map extended sources


- A factor of 5 improvement (to 2 eV) in spectral resolution
- Successor to the calorimeter to be flown on Astro-E (2000-2002)
- At Iron K, 2 eV resolution gives a velocity diagnostic of 10 km/s




Hard X-ray Capability

The hard X-ray band is crucial to determine the underlying continuum

Planned missions (AXAF, AMM, Spectrum XG, and Astro-E) have limited or no sensitivity above 10 keV

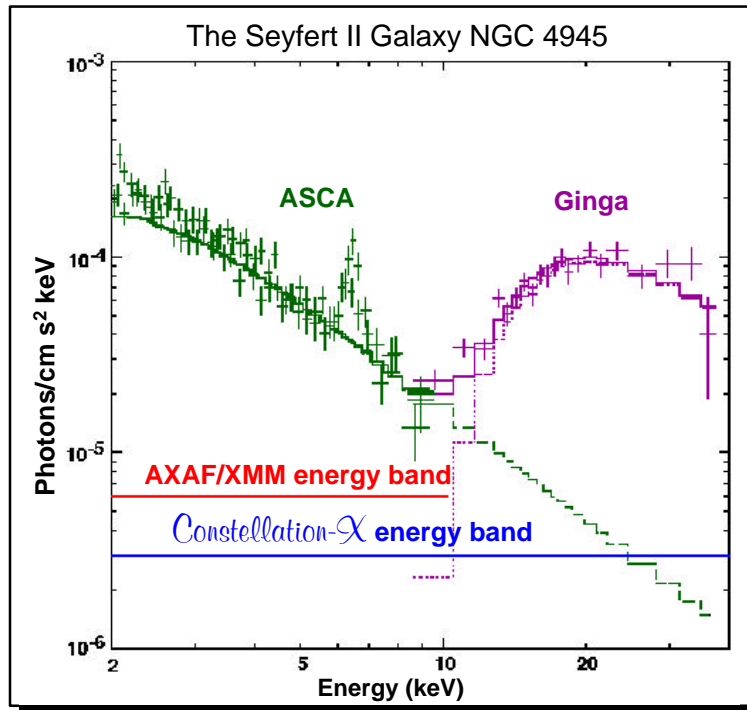

AGN viewed edge-on through the molecular torus

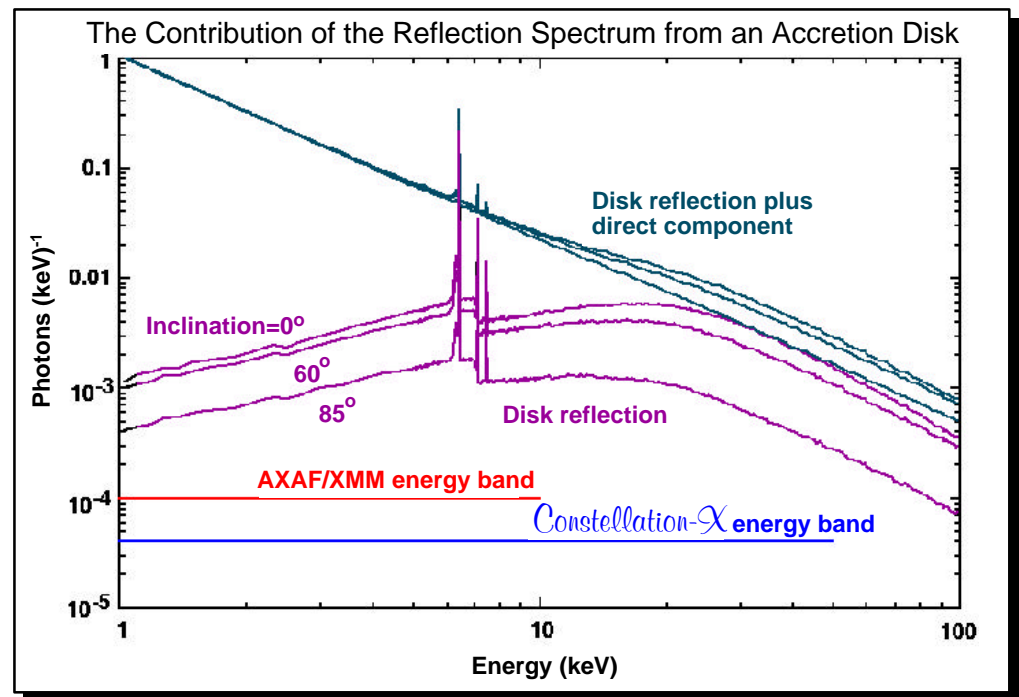


AGN viewed face-on

- No previous instrument has employed focusing in the Hard X-ray band
- Multilayer coatings and hard X-ray pixelated detectors to increase high energy response
- Dramatic sensitivity improvements will be achieved



Abundance Determinations with the Constellation X-ray Mission

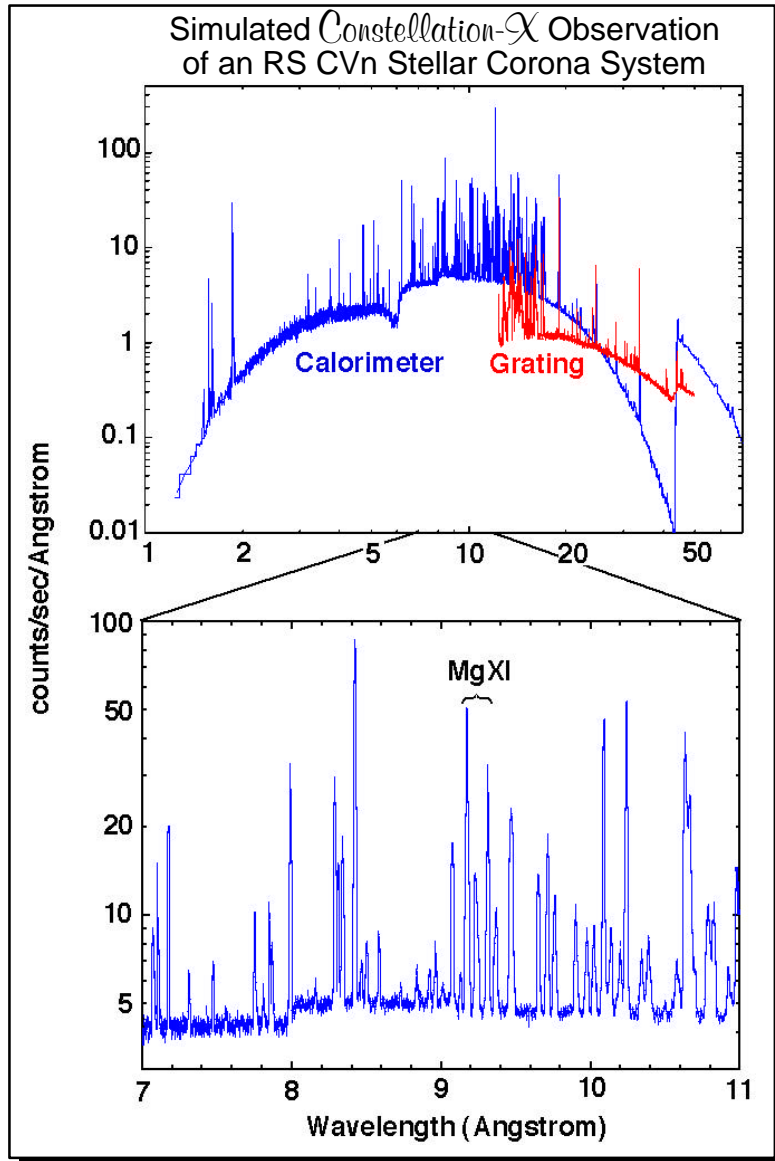

The Constellation-X energy band contains the K-line transitions of 25 elements allowing simultaneous direct abundance determinations using line-to-continuum ratios

The sensitivity of Constellation-X will allow abundance measurements in:


- the intracluster medium in distant clusters,
- the halos of elliptical galaxies,
- starburst galaxies,
- stellar coronae,
- young and pre-main sequence stars,
- X-ray irradiated accretion flows, and
- supernova remnants and the interstellar medium.



Temperature, Density, and Velocity Diagnostics

The spectral resolution of the Constellation X-ray Mission is tuned to study the He-like density sensitive transitions of Carbon through Zinc

A Selection of He-like Transitions Observed by Constellation-X

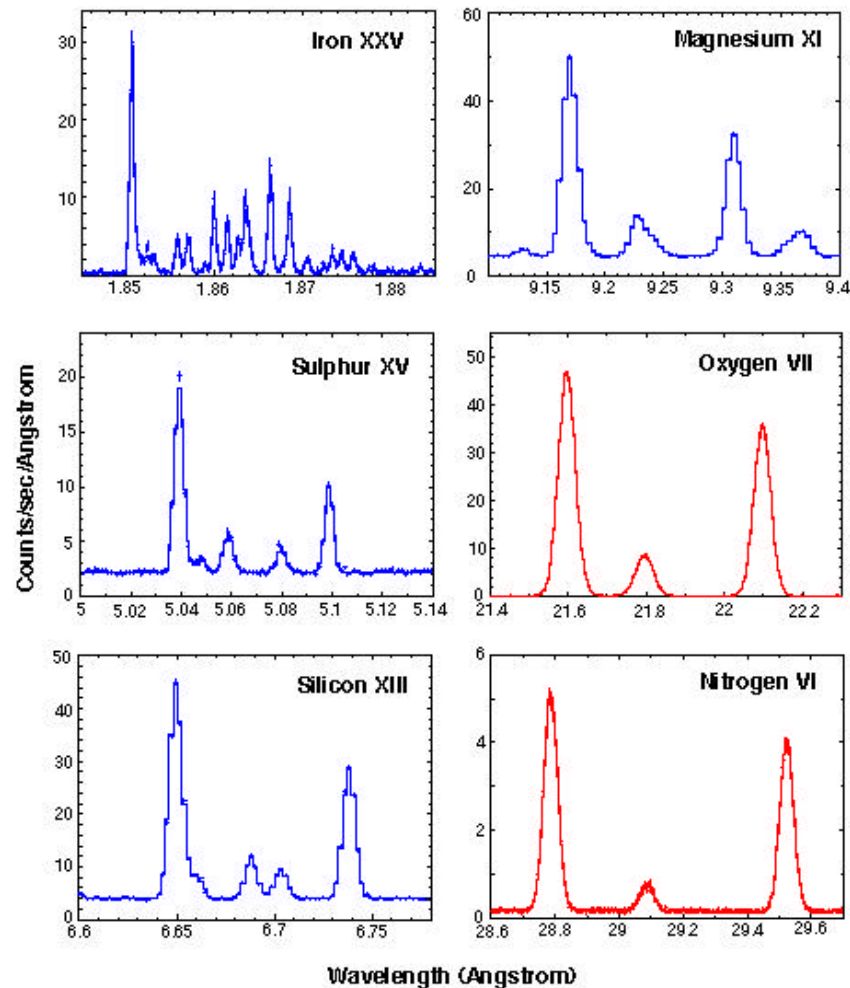

Direct determination of

- densities from 10^8 to 10^{14} cm $^{-3}$
- temperature from 1-100 million degrees.


Velocity diagnostics at Fe K line:

- line width gives a bulk velocity of 100 km/s
- line energy gives an absolute velocity determination to 10 km/s


Simultaneous determination of the continuum parameters




Constellation-X Technology Requirements

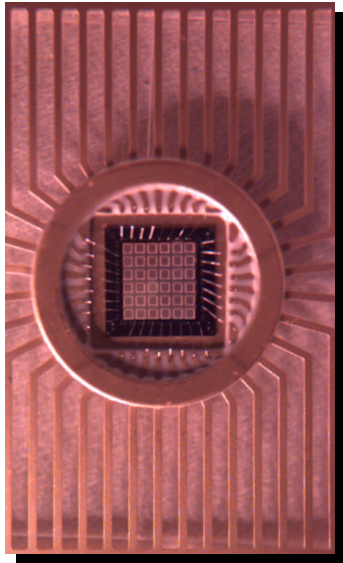


Microcalorimeters

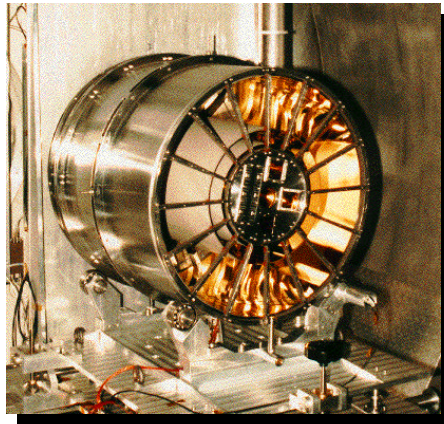


Lightweight
X-ray Optics

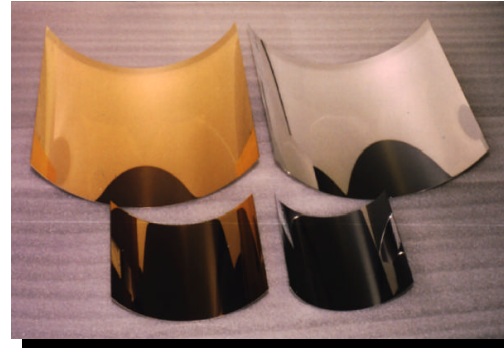


Multilayer Coatings

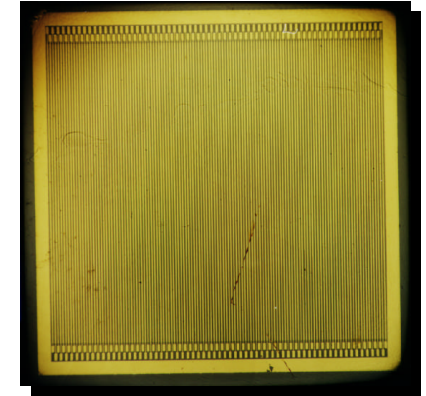



CdZnTe Arrays

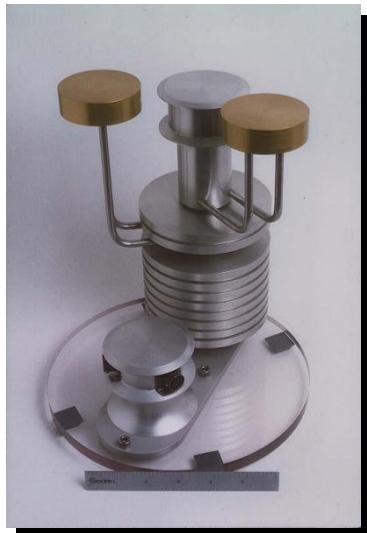

Coolers

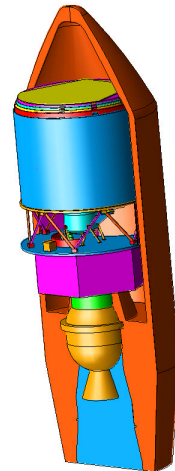


Deployable Structures

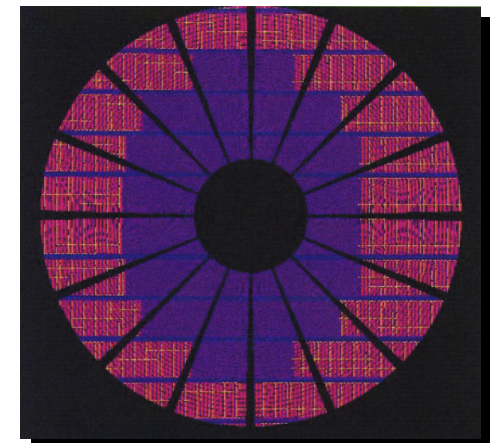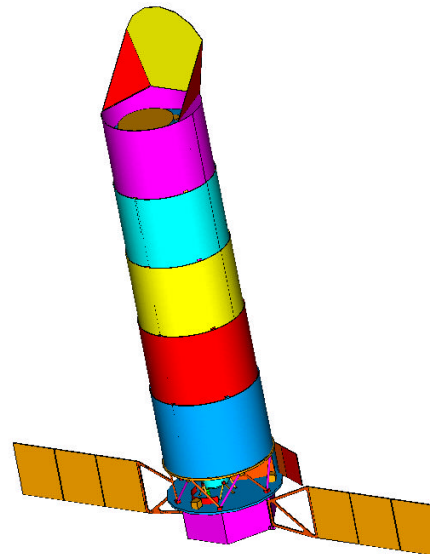

CCD/Grating




SXT X-ray Mirror Design Alternatives

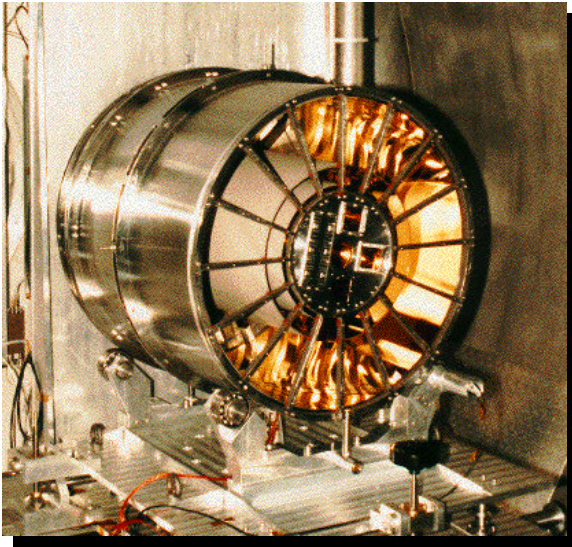

Replicated Shells (e.g., XMM):

- meets 15" angular resolution
- requires factor of 10 weight reduction (2,500 kg --> 250 kg)
- investigate SiC, cyanate ester, and other lightweight carriers
- thin-walled rib-reinforced Ni shells

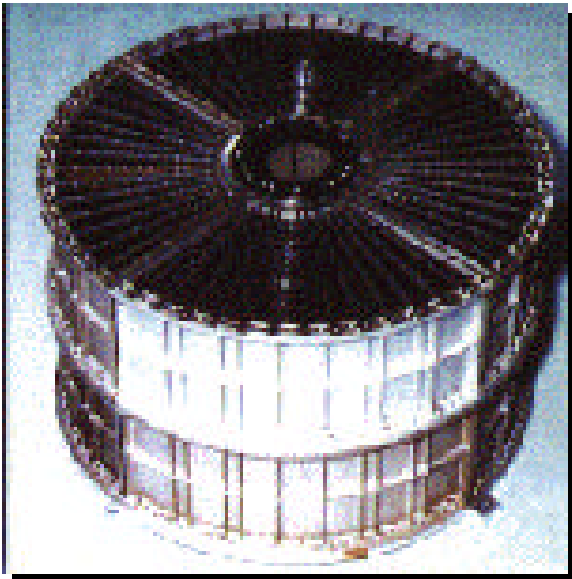

Segmented Optics (e.g., Astro-E):


- 210 kg weight meets the requirement
- requires factor of 4 improved angular resolution
- improved mandrels and foil alignment techniques



Constellation-X Technology Roadmap

Microcalorimeters

Requirements on the Constellation-X Microcalorimeter Array

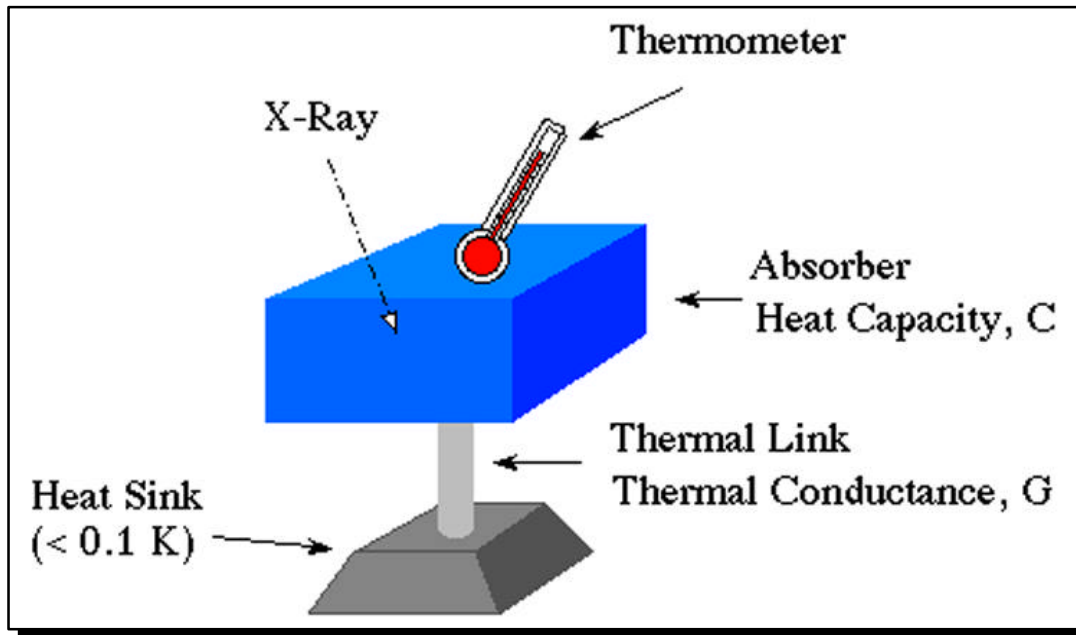

A detector with 2 eV spectral resolution over the 0.3 - 12 keV band

- High quantum efficiency (~99% at FeK)
- Imaging capability commensurate with mirror PSF
 - 2.5' FOV => 30 x 30 array
 - 10' FOV => 120 x 120 array
- Moderate speed for handling counting rates of 1 kHz or more

Current capability is 7-12 eV with 10 x 10 array

Technology developments required to achieve 2 eV resolution include


- more sensitive thermometers (transition edge superconductor)
- reduce heat capacity and power dissipation of existing system



Constellation-X Technology Roadmap

Microcalorimeter Cooling System

Develop long life, low weight, low cost, low vibration cooling systems

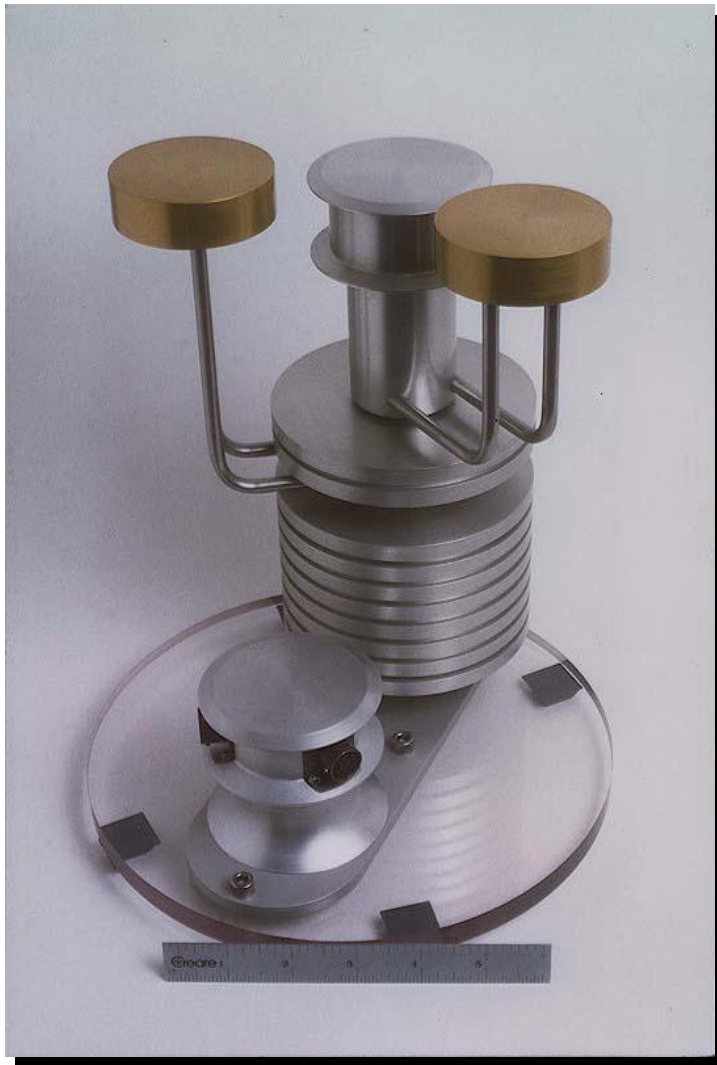

- **Required Technologies**

- Mechanical cryocooler for thermal shields providing 10-100 mW cooling @ 3-5 K
- Two-stage ADR system to reach 65 mK

- **Investigate alternative technologies**

- Dilution refrigerator vs ADR
- Sorption cooler vs Turbo-Brayton cooler


- **Recent progress**

- Engineering model Turbo-Brayton 5 W, 65 K cooler run for 1.5 years with no degradation; being fabricated for 1999 HST servicing mission
- 5-50 mW @ 4-10 K breadboard being fabricated with test in early 1998



Constellation-X Technology Roadmap

Grating/CCD Spectrometer

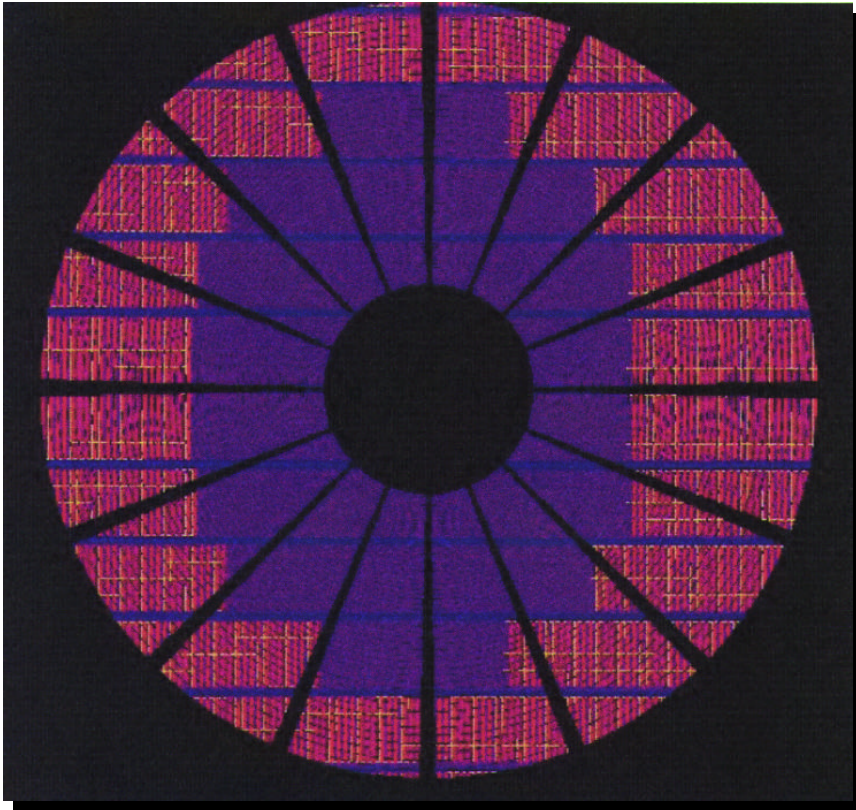

- The Grating/CCD spectrometer on *Constellation-X* will offer unprecedented sensitivity and resolution in the line-rich, low energy ($E < 1$ keV) X-ray band.
- Effective area more than an order of magnitude better than that of the grating spectrometers on AXAF and XMM will be achieved.
- The design builds on the successful technical heritage of XMM and AXAF.
- Important new technology developments will include
 - Significant reduction in the mass per unit area of the grating array
 - Improved diffraction efficiency and reduced scattering from the individual grating elements
 - Significant reduction in the power consumption and total mass of the CCD and their associated read-out electronics
 - Improved low energy quantum efficiency in the CCDs



Constellation-X Technology Roadmap

Hard X-ray Telescope: Optics


Primary Approach - Segmented shells

- Approach drawn from *ASCA*, *ASTRO-E*, *SODART*
- Epoxy replicated foils or thermally-formed glass substrates:
 - Mass ~ 100 kg achievable
 - Measured surface quality - 3.7 Å glass, 5.5 Å foils meets requirements

Required technical development


- Demonstrate coating without distortion
- mass production of optics within cost
- high quantum efficiency pixelated hard X-ray camera

Pt/C Foil Optic and
CdZnTe Strip Detector Mosaic (20-40 keV)

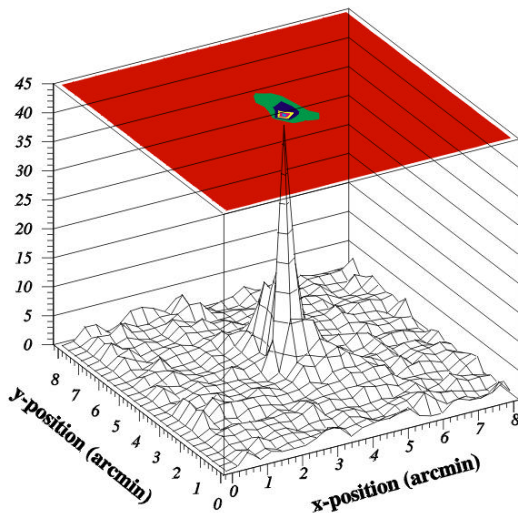

GSFC/Nagoya


Effective Area

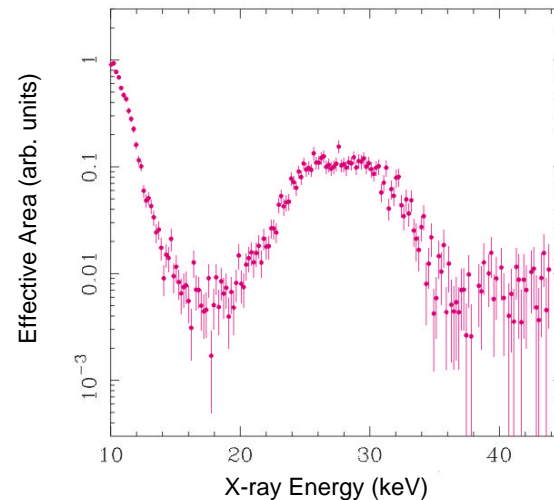

- Image at 30 keV achieved in August 1997 using Pt/C multilayer on an epoxy replicated foil mirror shell at GSFC/Nagoya -- 30 layer pairs, 0.13 micron thick with no distortion of foil due to stress
- W/Si multilayer on curved glass at Caltech/Columbia -- 200 layer pairs, 0.66 micron thick with acceptable stress
- Balloon flights planned in 1999



Constellation-X Technology Roadmap

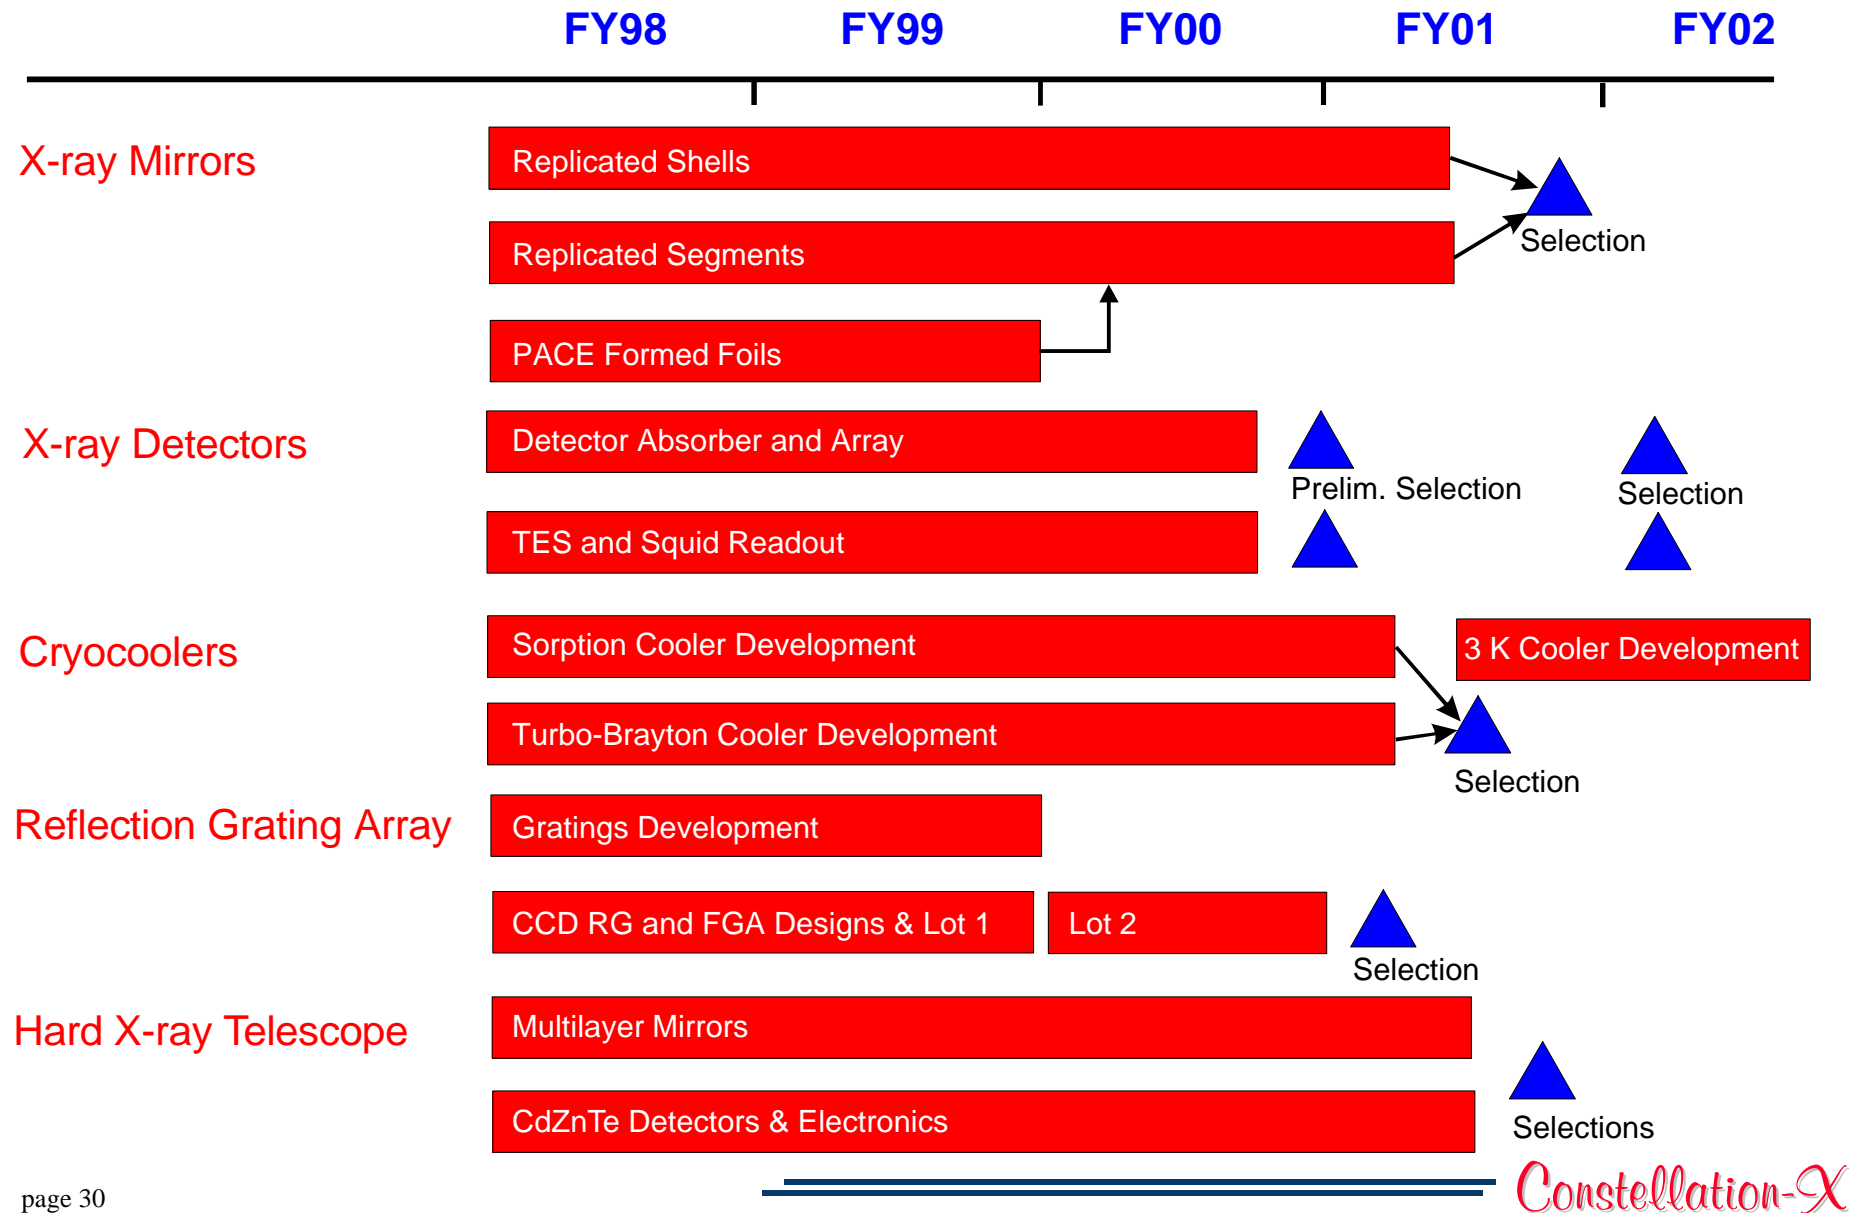



International Collaboration

International participation in the *Constellation* X-ray Mission is encouraged

- Too soon to make specific agreements on contributions until the technology is selected
- Current emphasis on contributing to the technology development program

Current arrangements and teaming:

- Osservatorio Astronomico di Brera (Italy)/SAO/MSFC developing lightweight replicated shell optics
- Nagoya University (Japan)/GSFC: Multilayers for HXT
- Danish Space Research Institute/CalTech: Multilayers for HXT
- MSSL (UK)/GSFC: Two-stage ADR
- Leicester University (UK)/GSFC: Microchannel plates for HXT



Summary

The *Constellation X-ray Mission* traces the evolution of the Universe from origins to endpoints

- the production and recycling of elements
- the origin and evolution of black holes

Investment now beginning to develop advanced technology to enable the mission

- assembly line production of lightweight, high performance optics, detectors, coolers, and spacecraft
- Multi-satellite concept is low-risk

Facilitates ongoing science-driven, technology-enabled extensions:

- spatial resolution,
- collecting area,
- energy bandwidth, and
- spectral resolution

<http://constellation.gsfc.nasa.gov>